

I N F O



INSTALLATION AND INSTRUCTION MANUAL  
WASHING MACHINE EW 1235 F

 **Electrolux**

# CONTENTS

<b>Warnings</b>	Page	3
<b>Installation</b>	Page	4
Unpacking	Page	4
Positioning	Page	4
Water inlet	Page	4
Water drainage	Page	5
Levelling	Page	5
Electrical connection	Page	6
<b>Getting to know your machine</b>	Page	7
Control panel	Page	7
Washing hints	Page	8
Wash care symbols	Page	9
Energetic wash cycles	Page	10
Gentle wash cycles	Page	11
Use of detergent and additives	Page	12
<b>Using your machine</b>	Page	13
Washing 4 kg of white cotton at 95°C	Page	13
Washing 2 kg of synthetic fabrics at 40°C	Page	14
<b>Maintenance and cleaning</b>	Page	15
Descaling, after each wash, external cleaning	Page	15
Cleaning the dispenser drawer, cleaning the drawer recess, the dangers of freezing	Page	15
Cleaning the filter	Page	16
The water inlet filters	Page	16
<b>Servicing</b>	Page	17
<b>Electrolux guarantee conditions</b>	Page	18
<b>Electrolux After Sales Service</b>	Page	19

## TECHNICAL SPECIFICATIONS

DIMENSIONS	Height	85 cm (33.5")
	Width	60 cm (23.6")
	Depth	57 cm (22.4")
POWER SUPPLY VOLTAGE		220-240 V/50 Hz
TOTAL POWER ABSORBED		2550 W (13A)
WATER PRESSURE	Minimum (hot)	5 psi (3.5 N/cm <sup>2</sup> )
	Minimum (cold)	7 psi (4.8 N/cm <sup>2</sup> )
	Maximum	110 psi (76 N/cm <sup>2</sup> )
MAXIMUM RECOMMENDED LOAD	Cotton, linen	5 kg (11 lb)
	Synthetics, delicate fabrics	2 kg (4.5 lb)
	Wool	1 kg (2.2 lb)
SPIN SPEED	Maximum	1200 rpm

## IMPORTANT INFORMATION

It is most important that this instruction book should be retained with the appliance for future reference. Should the appliance be sold or transferred to another owner, or should you move house and leave the appliance, always ensure that the book is supplied with the appliance in order that the new owner can get to know the functioning of the appliance and the relevant warnings.

These warnings have been provided in the interest of safety. You **MUST** read them carefully before installing or using the appliance.


- This appliance is designed to be operated by adults. Children should not be allowed to tamper with the controls or play with the product.
- It is dangerous to alter the specifications or attempt to modify this product in any way.
- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.
- Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person.
- This product should be serviced by an authorised Electrolux Service Centre, and only genuine Electrolux spare parts should be used.
- Care must be taken to ensure that the appliance does not stand on the electrical supply cable.
- Always unplug the appliance and turn off the water after use.
- Do not overload the appliance. See relevant section in instruction book.
- Always look through the glass door to check if water has drained before opening the door. If water is present do not open door before draining the water. If in doubt, refer to your instruction book.
- This appliance is heavy. Care should be taken when moving it.
- All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in instructions.
- The glass door becomes very hot during the washing cycle. Keep children away from the vicinity of the appliance whilst it is in operation.
- Leave the porthole door slightly ajar between washes to preserve the door seal.
- Only wash fabrics which are designed to be machine washed. If in doubt, consult the care label on the clothes.
- Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing. Underwired bras must NOT be machine washed.
- Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine.
- Garments which have been in contact with volatile petroleum products should not be machine washed. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine.
- Wash small items such as socks, laces, washable belts etc in a washing bag or pillow case as it is possible for such items to slip down between the tub and the inner drum.
- Only use the advised quantities of fabric softener. Damage to the fabric can ensue if you over-fill. Refer to the manufacturer's recommendations of quantities.
- As some duvets and eiderdowns should be washed in large commercial machines because of their bulk. Please check with the manufacturer of the item before washing in a domestic machine.
- The users should always check that they have not left their gas lighters (disposable or otherwise) in their clothing.
- Pets and children have been known to climb into washing machines. Please check your drum before use.
- **If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely.**
- Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Electrolux Service Centre. Always insist on genuine Electrolux spare parts.

# INSTALLATION


## Unpacking

Before starting the machine up, the packing must be removed as follows.

You are advised to keep all the packaging for re-use in case the machine is to be transported again.

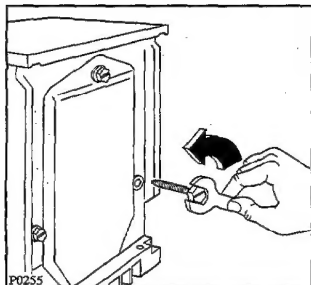



Unscrew and remove the rear right bolt (using a spanner). Lay the machine gently on its back, making sure that the hoses are not squashed.

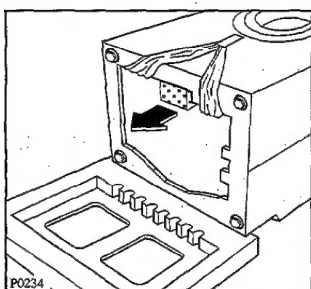


Remove the polystyrene block from the bottom of the machine.

Carefully slide out the right polythene bag (1), removing it toward the centre of the machine.


Repeat the operation for the left polythene bag (2), removing it toward the centre of the machine.

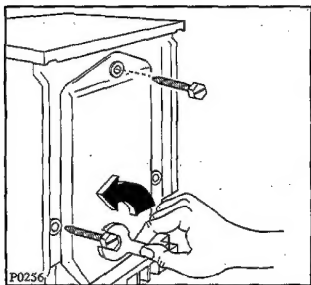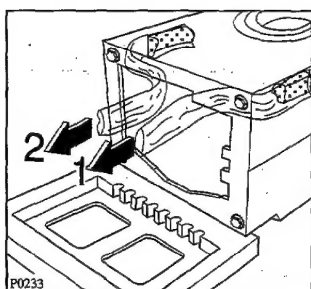

Remove the polystyrene base, set the machine upright and unscrew the two remaining rear bolts.

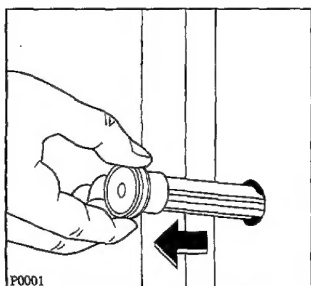

Slide out the 3 plastic spacers and plug the 3 holes with the 3 plastic plugs which you can find at the back of the machine.

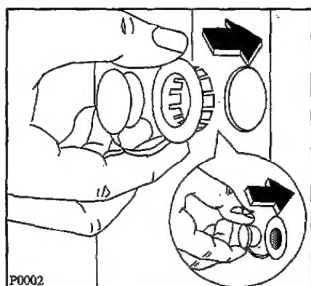


## Positioning

Your new Electrolux washing machine has been designed to be permanently plumbed in to your home's water supply and drainage system. However, if this is not possible, it may be connected to suitable existing taps with the drain hose discharging into a sink.

The appliance has two inlet hoses, hot and cold, with female  $\frac{3}{4}$ " BSP thread connectors. If this connection is not compatible with the plumbing of the existing installation, a variety of connectors are available from good hardware stores and plumbers merchants to suit most domestic plumbing. Any alterations to your existing plumbing must be carried out by a competent person, or qualified plumber.

## Water inlet

The inlets on the back of the appliance are colour coded, blue for cold and red for hot.

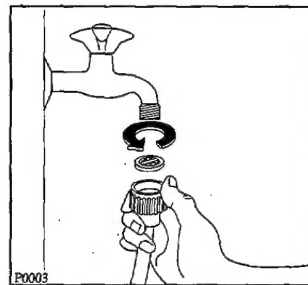

Before connecting the hoses be sure to fit the mesh filters supplied as per diagram.

If only a cold water supply is available, connect the two hoses to a cold water outlet by means of a 'Y' connection piece.


Installation should comply with local water authority and building regulations' requirements.

The appliance must be given a separate cold water supply and not be connected to a mixer tap, a single outlet water heater or a booster pump. A minimum water pressure of 7psi is required for safe operation of the appliance.

If you cannot make the cold water connection direct from the rising mains, you may be able to operate the appliance from your cold water storage system.

There should be a minimum distance of 5.02m (16  $\frac{1}{2}$ ft) between the appliance's inlet and the bottom of the tank.

There will be sufficient pressure for the hot water supply from the hot water cylinder if the height between the appliance's inlet and the bottom of the cold water storage cistern (not between the appliance and hot water cylinder) is at least 2.74m (9ft).

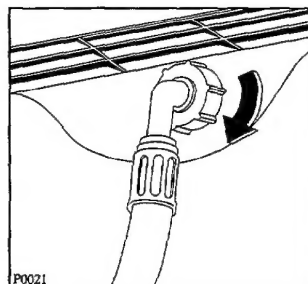


Set the hoses correctly by loosening the ring nuts. After positioning the inlet hoses, be sure to tighten the ring nuts again to prevent leaks.

# INSTALLATION

## Water drainage

If you intend the drain hose from the machine to empty into a sink, make sure that the sink is empty and that the plug hole is not blocked.

If the machine is permanently plumbed in, hook the end of the hose into a standpipe installed for the purpose. The standpipe must have an internal diameter of at least 40 mm (1 1/2") in order that there is an air gap between the drain hose and the standpipe. Make sure, that it is designed in such a way, that the end of the drain hose cannot be covered with water.

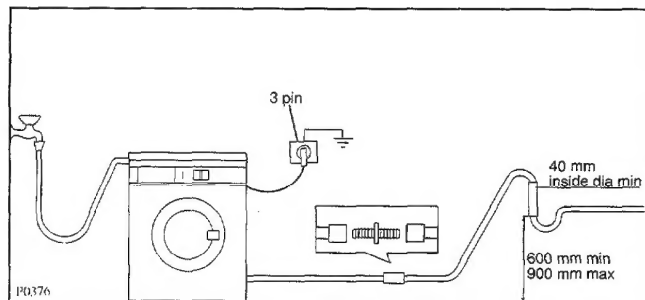



## Important

Before connecting up the machine to new pipework or to pipework that has not been used for some time, run off a reasonable amount of water to flush out any debris that may have collected in the pipes.

Whether discharging into a sink or a standpipe check that the end of the drain hose is neither too high nor too low. The top of the curve in the hose's end should be no more than 90cm (35.4"), and no less than 60cm (23.6") above floor level.

## Levelling

Level the washing machine by loosening or tightening the feet. Accurate levelling prevents vibration, noise and displacement of the machine during operation. After levelling the machine, secure the feet by tightening the ring nuts with the aid of a screwdriver.

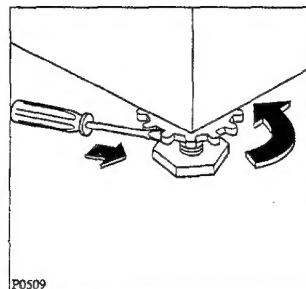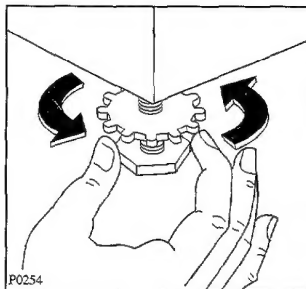

Some vibration is inevitable, especially if mounted on a wooden floor.

Sprung wooden floors are particularly susceptible to vibration. For advice, consult a builder. If possible, always place the machine on a solid floor.

## Special conditions

If the floor is carpeted with a deep-pile carpet or covered with crumbly or soft material, insert a rigid support base under the feet to prevent noise, vibration or displacement. The base should protrude a few centimetres beyond the edges of the machine.

## Warning

The machine should NOT be placed on deep pile carpeting.

## Note

Please ensure that when the appliance is installed it is easily accessible for the engineer in the event of a breakdown.

All plumbing and electrical work required to install this appliance must be carried out by competent persons or qualified plumbers or electricians.

## Electrical connections

**WARNING: THIS APPLIANCE MUST BE EARTHED.**

The manufacturer declines any liability should this safety measure not be observed.

If the plug that is fitted to your appliance is not suitable for your socket outlet, it must be cut off and the appropriate plug fitted.

Remove the fuse from the cut off plug.


The cut off plug should then be disposed of to prevent the hazard of shocks in case it should be plugged into a 13 Amp socket in another part of your home.

### IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:

Green and Yellow	- Earth
Blue	- Neutral
Brown	- Live

If you fit your own plug, the colours of the wires in the mains lead of your appliance may not correspond with the markings identifying the terminals in your plug, proceed as follows:

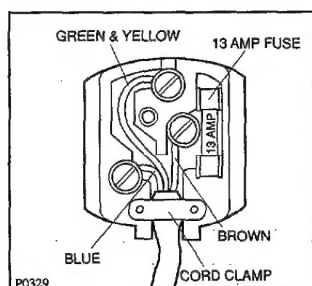

Connect the green and yellow (earth) wire to the terminal in the plug which is marked with the letter «E» or the earth symbol  $\equiv$  or coloured green and yellow.

Connect the blue (neutral) wire to the terminal in the plug which is marked with the letter «N» or coloured black.

Connect the brown (live) wire to the terminal in the plug which is marked with the letter «L» or coloured red.

The plug moulded on to the lead incorporates a fuse. For replacement, use a 13 Amp BS1362 fuse. Only ASTA or BSI approved fuses should be used.


The plug must not be used if the fuse cover/carrier is lost. The cover/carrier is indicated by the coloured insert at the base of the plug.

A replacement cover/carrier must be obtained from your local Electrolux Service Centre whose address is at the back of this book.


This appliance complies with E.E.C. directive No. 87/308 of 2.6.87 relative to radio interference suppression.

# GETTING TO KNOW YOUR MACHINE

## Control panel

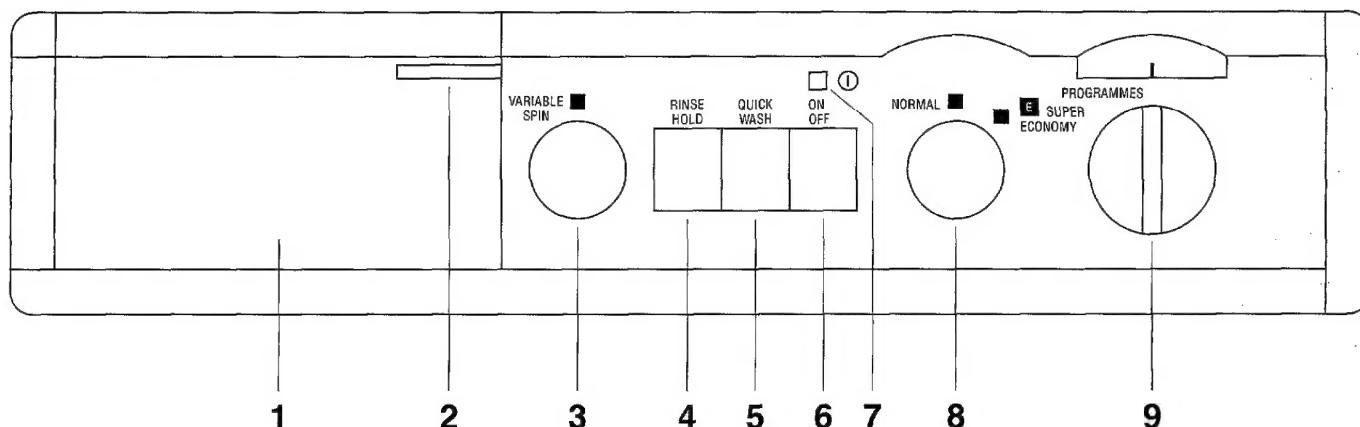

### 1 Detergent dispenser drawer

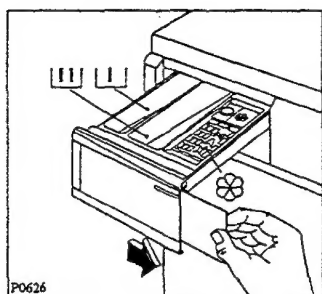

#### Symbols

- Prewash
- Wash
- Fabric softener

### 2 Pull out programme guide

### 3 Spin speed selector knob

Push to release the button.

The spin speed can be reduced as follows (from MAX to MIN):

**cotton and linen:** from 1200 to 650 rpm

**synthetics and wool:** from 650 to 450 rpm

### 4 Rinse hold button

Press this button to make the machine stop with water in the drum after the synthetic or delicate wash cycles. This prevents any creasing which may take place if the clothes are left damp in the drum. When it is convenient for you to empty the machine, simply press this button again so that the machine can proceed to drain and spin, or turn the dial to the drain programme (Q).

If this button is not activated, the washing programmes will end with a short spin.

Do not press this button for woollens: wool items should be gently spun.

### 5 Quick wash button

By depressing this button on programmes A-B-C and H the wash time will be reduced by approx. 20 mins. This is suitable only for garments which are lightly soiled.

### 6 On/Off button ①

By depressing this button the machine starts operating. When depressing it again, the machine stops.

### 7 Mains-on light

This light will illuminate when the machine starts working.

### 8 Super Economy knob

By turning this knob to the position prior to selecting wash programme A you will obtain a reduction of the wash temperature from 95 °C to 60 °C.

The duration of the programme will not alter. This will ensure a substantial saving in electricity consumption. It is advisable to use Super Economy when washing fabrics which are lightly soiled.

### 9 Programme selector knob

Press the knob and turn it **clockwise** to the required programme.

Before setting the programme selector knob to any position, the machine must be switched off by depressing the On/Off button.



## Washing hints

Do **NOT** overload the machine. Weigh the laundry the first few times you use the appliance.

The average weights of the most common items are listed below as a guide:

### 1000g = 1 kg

Sheet	700-1000 g
Pillow case	100-200 g
Tablecloth	400-500 g
Serviette	50-100 g
Tea towel	70-120 g
Linen hand towel	100-150 g
Towelling hand towel	150-250 g
Towelling bath towel	700-1000 g
Bath robe	1000-1500 g
Man's shirt	200-300 g
Apron	150-200 g



















- Some stains such as fruit, wine, grass, rust etc. are difficult to remove and should be treated before washing with specific products, which can be found in most household shops. In some cases it may help to soak the stain before washing with a special pre-soak product or biological detergent.
- Only wool marked "Pure New Wool - washable, preshrunk" can be washed in the machine using the wool programme; other types of wool should be washed by hand or dry cleaned.
- Once you have finished using the machine, you are advised to unplug it and turn off the water tap.
- Load the laundry loosely alternating large items with small ones.
- Sort the laundry according to the type of fabric, colour-fastness and how dirty it is.
- Avoid washing unhemmed or torn items as they may unravel.
- Before washing, empty all pockets of small objects which may have been left inside (coins, keys, screws etc), as these could damage the drain pump.
- When washing curtains, remove the hooks.
- Close poppers and zips and fasten loose buttons.
- It is essential to wash new coloured items separately when washing for the first time.
- When washing fabrics requiring different wash temperatures together, always select the lowest temperature.
- White items should not be washed with coloured items.
- Very small items (handkerchiefs, ribbons, socks etc) should be washed in a washing bag or a pillow case.
- Use a good quality detergent suitable for automatic washing machines.
- Use the correct quantities of detergent.
- For wool, use gentle detergent only in small quantities.
- Bleach is very corrosive; it should be used with care and kept out of reach of children.



## Wash care symbols

The familiar wash code symbols which are found on the care labels in most clothes are disappearing and a new set is introduced. The change is due to changes in



 


 

 

 
 
 
fabrics and detergents and because people are tending to use fewer programmes and mix fabrics in one load. The change brings the codes into line with the labelling used in the rest of Europe.

Old Symbol	New Symbol	Wash Action	Fabric
		Normal (Maximum)	White Cotton or Linen without Special Finishes
		Normal (Maximum)	Cotton, Linen or Viscose without Special Finishes Colourfast at 60°C.
	No longer used. White Nylon, Polyester/Cotton mixtures now included in 		
		Reduced (Medium)	Nylon, Polyester/Cotton, Viscose with Special Finishes: Cotton/Acrylic Mix.
		Normal (Maximum)	Cotton, Linen or Viscose Colourfast at 40°C but not 60°C.
		Reduced (Medium)	Acrylics, Acetate, Triacetate, Wool mixes, Polyester/wool blends.
		Much Reduced (Minimum)	Wool, wool mixes. Silks.
	No longer used. Silk now included in  printed acetate included in 		
	No longer used.		

The new wash symbols appear on the side of Washing Powder packets.

## Programmes for cotton and linen


 

 






Recommended load: max. 5 kg (11 lb)

PROGRAMMES	DEGREE OF SOIL	COMPARTMENTS TO USE (⊗ if required)	PROGRAMME DIAL POSITION	DESCRIPTION
PREWASH	Heavy		<b>R</b>	Prewash at 40 °C Draining and short spin
 WHITES	Normal		<b>A</b>	Wash at 95 °C Rinses Spin
  WHITES ECONOMY	Light		<b>A + E</b>	Prolonged wash at 60 °C Rinses Spin
 FAST COLOURED	Normal		<b>B</b>	Wash at 60 °C Rinses Spin
 NON-FAST COLOURED	Normal		<b>C</b>	Wash at 40 °C Rinses Spin
RINSES			<b>D</b>	Rinses, with fabric softener, if required Spin
SOFTENER RINSE			<b>F</b>	Rinse, with fabric softener, if required Spin
1200 SPIN			<b>G</b>	Long spin at 1200 rpm

Water filling: 30°/40° programmes: **cold** water filling  
50°/60°/95° programmes: **hot** and **cold** filling

## Programmes for synthetics, delicates and wool

    Recommended load: max. 2 kg (4.5 lb); wool max. 1 kg (2.2 lb)

PROGRAMMES	DEGREE OF SOIL	COMPARTMENTS TO USE (⊗ if required)	PROGRAMME DIAL POSITION	DESCRIPTION
 MINIMUM IRON	Normal		<b>H</b>	Wash at 50 °C Rinses Short spin (*)
 DELICATES	Normal		<b>J</b>	Wash at 40 °C Rinses Short spin (*)
 WOOLLENS 	Normal		<b>K</b>	Wash at 40 °C Rinses Short spin (*)
<b>30</b> REFRESHER WASH	Light		<b>L</b>	Wash at 30 °C Rinses Short spin (*)
RINSES			<b>M</b>	Rinses, with fabric softener, if required. Short spin (*)
SOFTENER RINSE			<b>N</b>	Rinse, with fabric softener, if required. Short spin (*)
SHORT SPIN			<b>P</b>	Draining of water and short spin at 650 rpm
DRAIN			<b>Q</b>	Draining of water

(\*) If the RINSE HOLD button has not been depressed.

## Use of detergent and additives

### Choosing The Right Detergent

Always use a low lather powder or liquid. This is important as too much lather prevents the articles from being properly cleansed and may damage the machine.

### Use Of Powder Detergent (such as Ariel Automatic)

The washing powder should be placed in the appropriate compartments in the detergent dispenser drawer before starting the programme.

### Compact Powder Detergents (such as Ariel Ultra)

The compact powder should be placed in the middle compartment of the drawer. The unique recirculating system ensures that the powder is dissolved.

### Liquid Detergents (such as Ariel Liquid)

A liquid detergent can be used in the middle compartment of the dispenser drawer. Start the machine immediately upon placing the liquid in the dispenser drawer.

#### Note

Once the dispenser has been filled, close it by pushing it in gently. This is particularly important if you are using fabric conditioner because if the drawer is slammed it will cause the conditioner to enter the machine prematurely.

### Specialist Detergents (such as Dreft Automatic)

Specialist detergents are now available when washing coloured and woolen garments. These detergents do not contain bleach and should not be used for white cotton. Follow the manufacturer's instructions.

#### Note

When using concentrated or liquid detergents and a pre-wash programme, remember that detergent will have to be placed into the machine for the main wash, after the pre-wash has finished.


### Important

As the Jetsystem is flexible and adjusts water intake according to wash load size it is not possible to give you exact recommendations as to the amount of detergent that should be used for any one wash.

Therefore we recommend that you use one 1/4 to 1/3 less than the detergent manufacturer recommends on the packet or bottle, making the appropriate allowances for soft or hard water, and light or heavy soilage of clothes. If you have judged the amount correctly you should expect to see a soft sudsy liquid during the wash. It is not necessary to have a head of lather on the water.

### Use Of Liquid Additives

Any liquid additives for softening or dressing the laundry must be poured into the appropriate compartment of the detergent dispenser drawer before starting the programme.

The compartment with the symbol  is for softeners and dressing agents; never exceed the MAX level.

When using super concentrated fabric conditioners such as Lenor Ultra, please follow the manufacturer's instructions carefully.

### Washing Net Curtains

To avoid an excessive and damaging amount of lather, it is advisable to wash large curtains singularly and take extra care when measuring the detergent.


Should an excess of lather accidentally occur, switch off the machine, advance the programme to a short spin sequence which is preceded by a drain cycle, to remove the lather and then start the wash again.

## USING YOUR MACHINE

### WASHING 4 KG OF WHITE COTTON AT 95°C

Suppose you have 4 kg of normally dirty laundry to wash. It is white cotton and is suitable for high temperature washing.



#### 1 Load the laundry

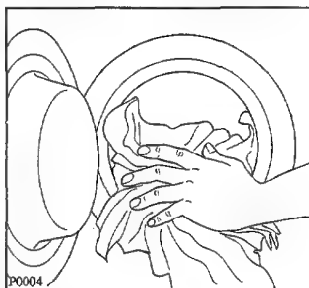

Open the door by pulling the catch outward.

Load the items one at a time and close the door.


#### 2 Measure out the detergent

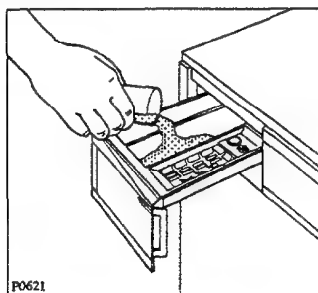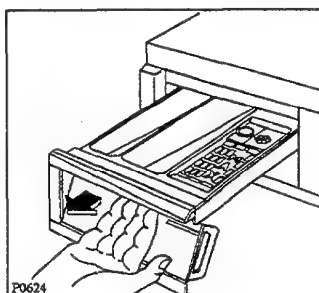

Pull out the detergent dispenser drawer from the control panel. Measure out the amount of detergent required and pour into the main wash compartment.

If you wish to carry out the prewash programme, pour the amount of detergent required into the "prewash" compartment.

#### 3 Add the fabric softener if required

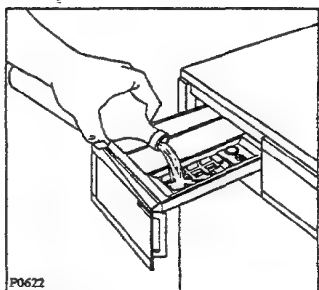

Pour the fabric softener, if required, into the compartment marked [🌸].


Do not exceed the MAX level and then close the drawer gently.

#### 4 Select the required option(s)

Select the spin speed and depress the QUICK WASH button, if required.

Select the Super Economy Option, depending on the selected programme.

#### 5 Select the required wash programme

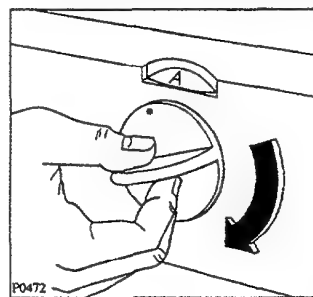


Depress and turn the programme selector dial **clockwise** to the required programme.

#### 6 Start the machine

Before starting up the machine check that:

- the appliance is plugged in
- the water supply taps are turned on
- the drain hose is correctly and securely positioned
- the door and the detergent dispenser drawer are closed.

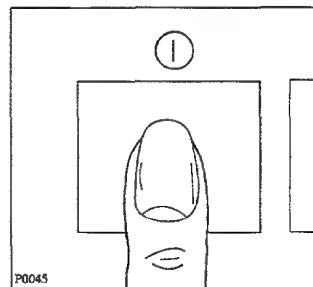

Depress the ON/OFF button, the mains-on light and door locked light will illuminate and the machine will start operating.

#### 7 At the end of the programme

The machine stops automatically.

The door is controlled by a safety device which releases 2 minutes after the end of the programme (the door locked light goes out), providing there is no water in the drum. If after 2 mins the door does not open it is advised to select a drain programme to ensure the drum is empty.

Switch the machine off by depressing the ON/OFF button again, the mains-on light goes out.


Release the button.

When the programme has finished you are advised to unplug the appliance and turn off the water taps.

## WASHING 2 KG OF SYNTHETIC FABRICS AT 40°C

Suppose you have 2 kg of synthetic fabric laundry to wash. They are rather delicate fabrics and should not be washed at a high temperature.



### 1 Load the laundry

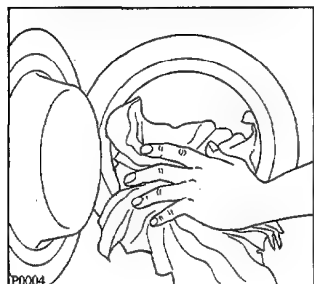

Open the door by pulling the catch outward.

Load the items one at a time and close the door.


### 2 Measure out the detergent

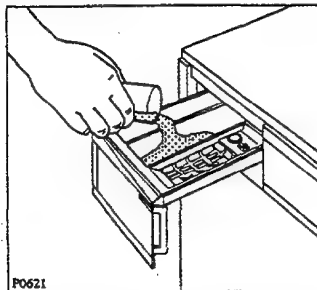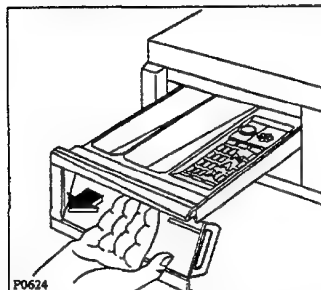


Pull out the detergent dispenser drawer from the control panel. Measure out the amount of detergent required and pour into the main wash compartment.

If you wish to carry out the prewash programme, pour the amount of detergent required into the "prewash" compartment.

### 3 Add the fabric softener if required

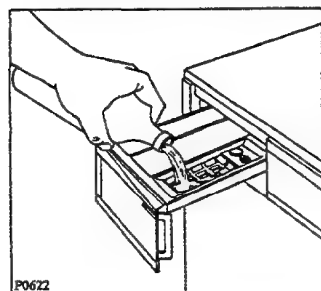


Pour the fabric softener, if required, into the compartment marked .

Do not exceed the MAX level and then close the drawer gently.

### 4 Select the required option(s)

Select the spin speed and depress the RINSE HOLD button, if required.

### 5 Select the required wash programme

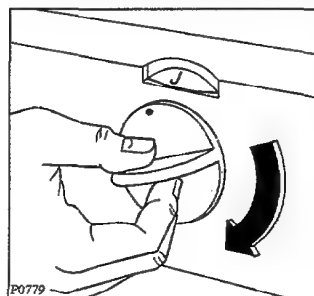


Depress and turn the programme selector dial **clockwise** to the required programme.

### 6 Start the machine

Before starting up the machine check that:

- the appliance is plugged in
- the water supply taps are turned on
- the drain hose is correctly and securely positioned
- the door and the detergent dispenser drawer are closed.

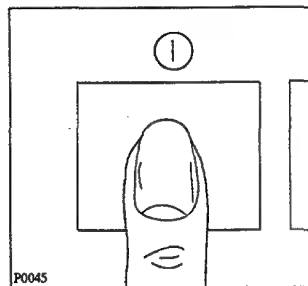

Depress the ON/OFF button, the mains-on light and door locked light will illuminate and the machine will start operating.

### 7 At the end of the programme

The machine stops automatically.

If you have selected the RINSE HOLD option, the machine will stop after the last rinse with the water left in the wash tub, to prevent the fabric from creasing. Select programme «Q» or release the RINSE HOLD button to drain the water.

The door is controlled by a safety device which releases 2 minutes after the end of the programme (the door locked light goes out), providing there is no water in the drum. If after 2 mins the door does not open it is advised to select a drain programme to ensure the drum is empty.

Switch the machine off by depressing the ON/OFF button again, the mains-on light goes out.

When the programme has finished you are advised to unplug the appliance and turn off the water taps.

## MAINTENANCE AND CLEANING

Before any maintenance or cleaning is carried out you must **DISCONNECT** the appliance from the electricity supply.

### Descaling

The water we normally use contains lime. It is a good idea to periodically use a water softening powder in the machine. Do this separately from any laundry washing, and according to the softening powder manufacturer's instructions. This will help to prevent the formation of lime deposits.

### After each wash

Leave the door open for a while. This helps to prevent mould and stagnant smells forming inside the appliance. Keeping the door open after a wash will also help to preserve the door seal.



### External cleaning

Clean the exterior cabinet of the appliance with soap and water only, and then dry thoroughly.


### Cleaning the dispenser drawer

From time to time the washing powder and additive dispenser drawer should be cleaned.

Remove the drawer by pressing the catch downwards and by pulling it out. Flush it out under a tap, to remove any traces of accumulated powder.

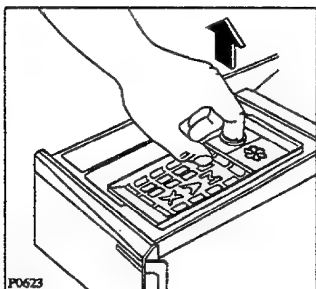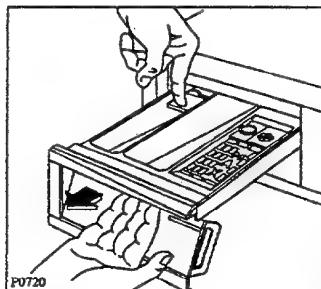

### Cleaning the drawer recess

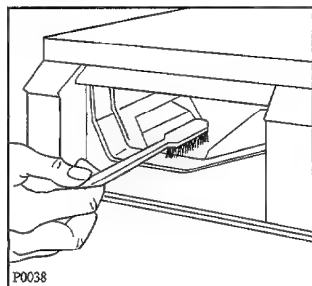

Having removed the drawer, use a small brush to clean the recess, ensuring that all washing powder residue is removed from the upper and lower part of the recess.

Replace the drawer and run the rinse programme for a few minutes without any clothes in the drum.

### The dangers of freezing

If the machine is exposed to temperatures below 0°C, certain precautions should be taken.


- Turn off the water taps.
- Select a wash programme and run for a few seconds.
- Unscrew the inlet hoses.
- Unhook the drain hose from the rear support and position the end in a bowl. Run the draining programme for a few seconds.
- When you intend to start the machine up again, make sure that the room temperature is above 0°C.



## Cleaning the filter

### The water drain filter




A clean filter is important for the correct functioning of the machine, and should therefore be cleaned after every wash.

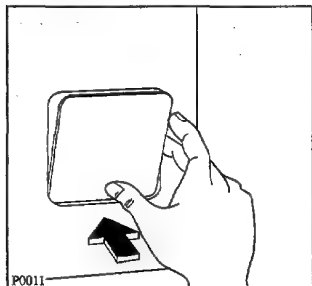

Open the filter door and place a container underneath to catch any spillage. If the filter is blocked and the machine is unable to drain you will need to drain the water manually from the machine at this stage. To do this,

unhook the drain hose from the standpipe or sink and hold the end of the hose over a bowl on the floor. The water should drain by gravity into the bowl. When the bowl is full, hook the hose back up and empty the bowl. Repeat the procedure until water stops flowing out.

Unscrew and remove the filter.

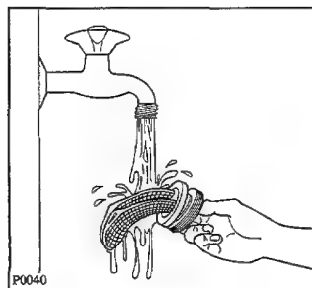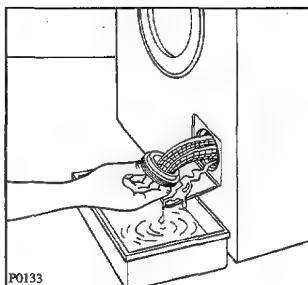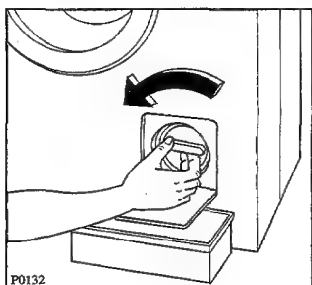

Clean carefully under a fast running tap.

### Warning


When the appliance is in use and depending on the programme selected there can be hot water in the filter. Never remove the filter during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When replacing the filter, ensure it is securely retightened so as to stop leaks and young children being able to remove it.

### The water inlet filters

If your water is very hard or contains traces of lime deposit, the water inlet filters may become clogged.

It is therefore a good idea to clean them from time to time.

Turn off the water taps. Unscrew the water inlet hoses.

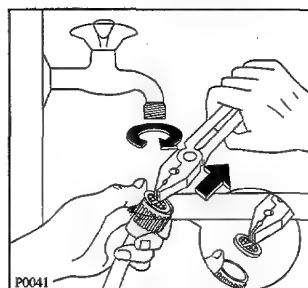

Remove and clean the filters using a hard bristle brush. Replace the filters and tighten up the inlet hoses.

## SERVICING

**Before contacting your local Electrolux Service Centre, please make the following checks:**

### **The machine does not start up**

- The ON/OFF-button has not been depressed
- The door is not closed properly
- No water is entering the machine (see: the machine does not fill)

### **The machine does not fill**

- The water taps are not turned on
- The water supply has been disconnected.
- The inlet hoses are kinked
- The water pressure is too low
- The water inlet filters are clogged

### **The machine empties as it fills**

- The end of the drain hose is too low
- The end of the drain hose is submerged in water
- Drain pipe has no vent-hole

### **The machine does not drain or spin**

- You have selected a gentle wash cycle
- The drain filter is clogged
- The drain hose is kinked
- The drainage system pipes are blocked
- The drain hose extension is incorrect
- There may be a delay of up to 1 minute before the spin programme starts

### **The machine leaks or overflows**

- Too much detergent
- Unsuitable detergent
- The inlet hose is loose
- The detergent dispenser drawer or recess is clogged
- The end of the drain hose is not securely positioned
- The drainage system pipes are blocked

### **The machine vibrates or is noisy**


- The internal packing has not been removed
- The machine is not level
- The machine is in contact with the wall or furniture
- The washing load is badly distributed
- The machine is overloaded

### **The door does not open**

- The safety device has locked it (door locked light on)
- Water in the wash tub

If, after the above checks, there is still a fault, call your local Electrolux Service Centre, whose address can be found in the list on pages 19 to 22.

Please make sure you give the model and serial number of the appliance.

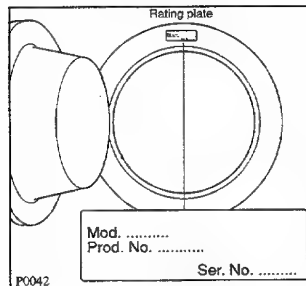

This information can be found on the rating plate (see picture) or on the guarantee card.

Original spare parts can be purchased from Electrolux Service Centres.

**In-guarantee customers should ensure that the above checks have been made as the engineer will make a charge if the fault is not a mechanical or electrical breakdown.**

**Please note that proof of purchase is required for any in-guarantee service calls.**

# ELECTROLUX GUARANTEE CONDITIONS

We, Electrolux, undertake that if within 12 months of the date of the purchase this Electrolux appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same FREE OF ANY CHARGE for labour, materials or carriage on condition that:

- The appliance has been installed correctly and used only on the electricity supply stated on the rating plate.
- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's operating and maintenance instructions.
- The appliance has not been serviced, maintained, repaired, taken apart or tampered with, by any person not authorised by us.

All service work under this guarantee must be undertaken by a Electrolux service representative or authorised agent.

Any appliance or defective part replaced shall become the property of Electrolux.

This guarantee is in addition to your statutory and other legal rights.

Home visits are made between 8.30 am and 5.30 pm Monday to Friday. Visits may be available outside these hours in which case a charge will be made.

## Exclusions

This guarantee does not cover:

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic, or vacuum cleaner drive belts, brushes or dust bags.
- Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom.
- Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements.
- Products of Electrolux manufacture which are not marketed by Electrolux.
- EEC Countries. The standard guarantee is applicable but subject to the owners responsibility and cost to ensure the appliance meets the standards set by the country to which the product is taken. Proof of purchase may be required. Electrolux Aftersales Service in the country concerned, will be pleased to advise further.

## Electrolux After Sales Service - Service Centre Addresses 21/03/94

CENTRE	POSTAL DISTRICTS	SERVICE APPOINTMENTS	ADDRESS
ABERDEEN	AB	0244-696569	Electrolux After Sales Service Northeast Appliance Service 8 Cornhill Arcade Aberdeen AB2 5UT
ARGYLLE	PA 24-61	0505-321316	Electrolux After Sales Service T.D.C. Refrigeration 40 Arran Place Linwood Renfrewshire PA3 3QU
BARNSTAPLE	EX 18-23	0271-328826	Electrolux After Sales Service McBain Refrigeration Unit 4 Upcott Avenue Pottington Industrial Estate Barnstaple Devon EX31 1HN
BORDERS	TD	0573-224411	Electrolux After Sales Service James Stewart & Son 2-8 Wood Market Kelso Borders TD 5 7AX
BOURNE	PE 1-15 PE 34,38 NG 31-34	0778-394424	Electrolux After Sales Service Bourne Electrical Pinfold Road Manning Road Industrial Estate Bourne Lincolnshire PE 10 9HT
CANVEY	E EC EM N MW W WC AL CB HA HP LU MK SG UB WD NR CM CO IG RM SS PE 16-19, 30-33, 35-37	081-443-3464 081-965-9699 081-9659699 0268-694144 0268-694144	Electrolux After Sales Service 2-4 Sandhurst Kings Road Canvey Island SS8 0QY IP
CARDIFF	CF NP 1-4, 6, 9-44 SA 1-18 SA 21-32	0222-460131	Electrolux After Sales Service Guardian Industrial Estate Clydesmuir Road Tremorfa Cardiff CF2 2QS
CUMBRIA	CA	0288-594747	Electrolux After Sales Service E.T.B. Services Carlisle Enterprise Centre James Street Carlisle CA2 5AP
DUMFRIES & GALLOWAY	DG 1-14	0387-65166	Electrolux After Sales Service Allan Crossan (Service) 93 Irish Street Dumfries Scotland DG1 2PQ

## Electrolux After Sales Service - Service Centre Addresses 21/03/94

CENTRE	POSTAL DISTRICTS	SERVICE APPOINTMENTS	ADDRESS
DUNDEE	DD1-14 PH8-18	0250-876285	Electrolux After Sales Service I Brogan Domestic 1 Lochinblair Gardens Dunkeld Road Blairgowrie Perthshire PH10 6GA
FIFE	KY1-16 PH1-7	0592-610590	Electrolux After Sales Service M & H Appliances 8 Eddison House Fullerton Road Queensway Industrial Estate Glenrothes Fife KY7 5QR
GLASGOW	G KA ML PA1-23	041-647-4381	Electrolux After Sales Service 20 Cunningham Road Clyde Estate Rutherglen Glasgow G73 1PP
GUERNSEY	All Codes	0481-46931	Guernsey Electricity PO Box 4 Vale Guernsey Channel Island
HAVERFORDWEST	SA33-39, SA41-44, SA61-73	0473-710914	Electrolux After Sales Service C Butherway 1 Church Road Haverfordwest Dyfed Wales SA 62 6AG
HEREFORD	HR1-9 LD1-8 SY1, SY18 NP5, NP7, NP8	0432-340334	Electrolux After Sales Service Domestic Repair Centre Unit 3 Bank Buildings Cattle Market Hereford HR4 9HX
HULL	YO4 YO11-18 YO25 HU1-19 DN14	0482-585678	Electrolux After Sales Service John Sizer Unit 1, Boulevard Unit Factory Estate Hull HU3 4AY
INVERNESS	IV1-28, 30-36, 40-49, 51-56 PH19-26, 30-44 KW1-14	0463-792952	Electrolux After Sales Service Highland Appliances Unit 3B3 Smithton Industrial Estate Smithton Inverness IV1 2PD
ISLE OF WIGHT	PO30-41	0983-872552	Electrolux After Sales Service Wyatts Electrical Service 4 Forelands Road Bembridge Isle of Wight PO35 5XW

## Electrolux After Sales Service - Service Centre Addresses 21/03/94

CENTRE	POSTAL DISTRICTS	SERVICE APPOINTMENTS	ADDRESS
<b>JERSEY</b>	All Codes	0534-505050	Jersey Electricity Company PO Box 45 Queens Road St Helier Jersey, Channel Islands JE4 8NY
<b>LAMPETER</b>	SA19, 20 SA40 SA45-48 SY23-25	0570-423020	Electrolux After Sales Service Lampeter Domestic Appliance Service Unit 16 Lampeter Industrial Es- tate Lampeter SA4 7DY
<b>LANCASTER</b>	LA1-23	0772-316175	Electrolux After Sales Service NL Services Unit 333 Ranglet Road Walton Summit Bamber Bridge Preston, Lancashire PR5 8AR
<b>LEEDS</b>	BD DN1-7, 10-12 HD HG HX LS S WF YO1-3, 5-8 DE NG1-22, 25	0532-608511	Electrolux After Sales Service 64-66 Cross Gates Road Leeds LS15 7NN
<b>LINCOLN</b>	DN21 subcodes 1, 2 & 5 only LN1, 2, 4-6 LN3 subcodes 4 & 5 only LN8-10 NG23, 24 PE20-25	0522-514603	Electrolux After Sales Service Brian Hudson Unit 8 Stonefield Park Clifton Street Lincoln LN 5 8AA
<b>NEWTON ABBOTT</b>	EX1-17 PL1-9, 16, 19-21 TQ	0626-65909	Electrolux After Sales Service South West Domestic Service Unit 2 Zealley Industrial Estate Kingsteighnton Newton Abbott South Devon TQ12 3SJ
<b>NORTH WALES</b>	LL	0745-591616	Electrolux After Sales Service GMS (Cymru) Unit 2 Coed - Parc Abergele Road Rhuddlan Clwyd, Wales LL18 5UG
<b>NORTHERN</b>	DL TS DH YO21, 22 DN NE SR FY PR WN BB BL M OL SK CH CW L WA	0325-301400 091-493-2025 0282-774621 0282-774621 051-2541724	Electrolux After Sales Service PO Box 40 Preston Road Aycliffe Industrial Estate Newton Aycliffe, Co Durham DL5 6XA
<b>NORTHERN IRELAND EAST</b>	BT1-30, 36-57, 63-67	0232-741742	Electrolux After Sales Service Unit C3 Edenderry Industrial Estate 326 Crumlin Road Belfast BT14 7EE

## Electrolux After Sales Service - Service Centre Addresses 21/03/94

CENTRE	POSTAL DISTRICTS	SERVICE APPOINTMENTS	ADDRESS
<b>NORTHERN IRELAND WEST</b>	BT31-35, 60-62 BT68-82, 92-94	0861-510400	Electrolux After Sales Service G & O (Armagh) Service Owenmore House Kilwee Business Park Upper Dunmurray Lane, Belfast BT17 0HD
<b>NUNEATON</b>	B DY ST TF WR WS WV GL NN OX SN CV LE	021-358-7076 021-358-5051 0993-704411 0203-354424	Electrolux After Sales Service Unit 23-24 Alliance Business Park Townsend Drive Nuneaton Warwickshire CV11 6RX
<b>REDRUTH</b>	TR1-20, 26, 27 PL10-15, 17, 18, 22-35	0209-314407	Electrolux After Sales Service Cornwall Domestic Service Unit 7D Pool Industrial Estate Wilson Way Redruth, Cornwall QW
<b>SHREWSBURY</b>	SY1-6 SY8-17 SY19-22	0743-450279	Electrolux After Sales Service BLI Service 6 Harlescott Barn Harlescott Lane Shrewsbury, Shropshire SY1 3SY
<b>SOUTH HUMBERSIDE</b>	DN8, 9 DN15-20 DN21 subcodes 3, 4 only DN31-40 LN3 subcode 6 only LN11-13	0472-267978	Electrolux After Sales Service John Robinson (Electrical) Unit 74 New Enterprise Centre King Edward Street Great Grimsby DN31 3JP
<b>SOUTHERN</b>	BN16-18, GU27 BH DT SO SP BA BS PO1-22 TA TR21-25	0705-667411 0705-667411 0272-211876	Electrolux After Sales Service Limberline Road Hilsea Portsmouth, Hampshire PO3 5JJ
<b>TONBRIDGE</b>	CT DA ME SL GU1-26 RG TN BN1-15 RH TW BR CR SE SW SM KT	0732-357722 0732-357722 081-658-9069	Electrolux After Sales Service 61-63 High Street Tonbridge Kent TN9 1SD



